


1. General Information-specification

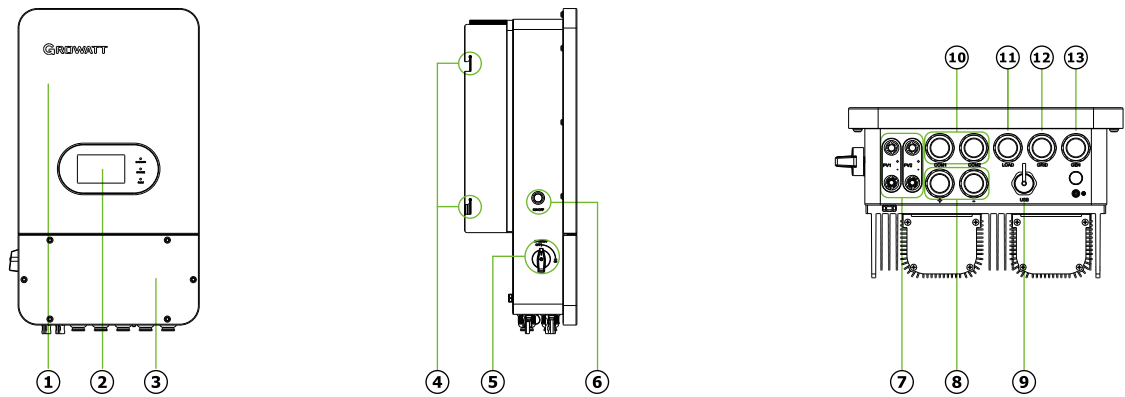

- (1).Host panel

(2).LCD display

(3).Wiring box cover
- (4).Wall mounting hole

(5).PV switch

(6).Power On/Off button
- (7).PV input port

(8).Battery input port

(9).USB port
- (10).COM port

(11).LOAD port

(12).GRID port

(13).GEN port

⚠ Note:

1.Before installing the device, check that the package contents are intact and complete against the packing list If any damage is found or any component is missing, contact your dealer.


2. This guide will be updated from time to time due to product upgrades or other reasons. Unless otherwise agreed this document is intended as a guide only. All information and suggestions do not constitute an express or implied warranty. The final interpretation of the content is at Growatt's discretion

3. This document is for quick installation guide only. For details, please refer to the User Manual.


4. Machine damage caused by failure to follow the content is not covered by the warranty.

2.Installation

2.1 Tool Recommendation

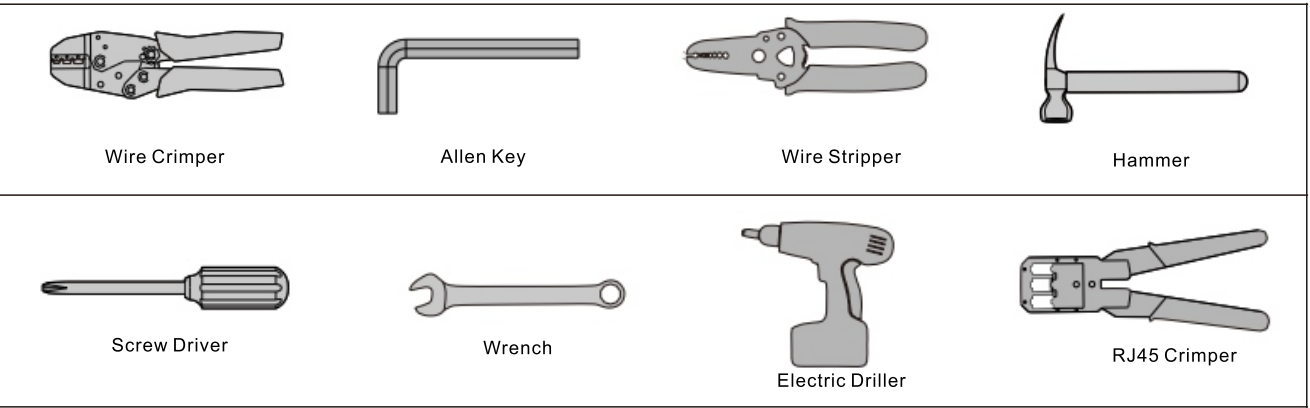

2.2 System Overview

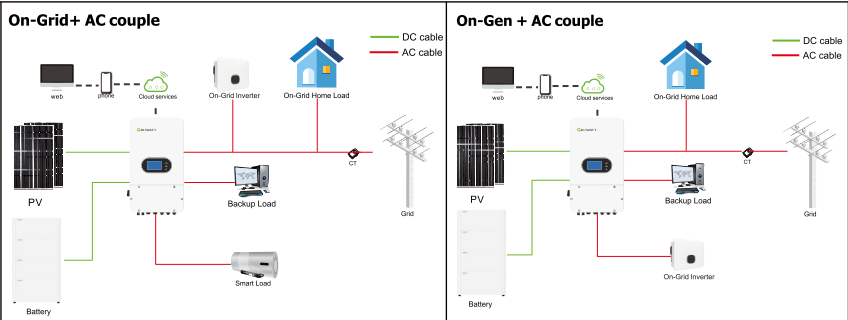

2.3 Installation requirements

Dimension	W(mm/inch)	H(mm/inch)	D(mm/inch)
	637.0/25.08	372.0/14.65	220.0/8.66
SPM 3000-6000 TL-HU			

2.3 Installation requirements

1.Please make sure that the thickness of the wall for inverter installation is more than 70mm.

2.Please place the Wall mount on the wall and confirm the level by level.

3.Please mark the holes in the 4 mounting holes of hole pattern.

4.Drill a hole with a depth of 60mm at the mark with a drill of 12mm.

5.Please knock the expansion screw rubber sleeve into the hole on the wall, and then screw on the Expansion screw.

6.Please hang the inverter on the expansion screws, and then tighten the expansion screws.

3. Electronic connection

Please prepare the cable before connecting as follows.

NO.	Cable name	Type	Recommend model	⚠ Note: Please make sure all switches are OFF before wiring. For personal safety, please do not operate with electricity.
1	Battery input wire	Red and black multi-core copper	2/0AWG or 4/0AWG	
2	AC (Grid, GEN, Load, Smart Load) wire	Two different color stranded wire	10AWG	
3	PV input wire	Photovoltaic dedicated cable	10AWG	
4	Grounding wire	Single yellow-green stranded wire	12AWG	
5	Meter communication cable	RS485 A+ RS485 B-	Min.3-wire shielded twisted pair	0.2-1 mm²/24-18AWG
6	Other communication	CAT5E suggested	/	

3.1 Battery module connection

3.1.1 Battery connection

1.Strip 0.59 inches (15 mm) of the battery cable insulation.

2.Insert the battery cable into the open crimping pliers.

3.Insert the tubular terminal and press the crimping pliers.

4. Connect the battery cable to the corresponding terminal through the circular opening according to the symbol (BAT+, BAT-) on the terminal

5. Use a suitable screwdriver to install the battery cable and tighten the tightening bolts clockwise.

Note: It is strictly forbidden to connect the positive and negative poles of the battery input terminals reversely!

3.1.2 RS485 and CAN connection

1. Connect one end of the BMS communication cables to the BMS communication port in the inverter wiring box.

2. Lead the other end of the BMS communication cables from hole COM1 and connect it to the lithium battery communication port.

The connection steps are shown on the left.

Note: Only for lithium battery.

3.2 Grid connection, generator connection and load connection

The AC circuit breaker must be turned off before connecting the grid, load and generator ports.

1.Strip 0.7inches(18 mm)of the AC cable insulation.


2. Insert the AC cable into the open crimping pliers.

3.Insert the tubular terminal and press the crimping tool.

4. According to the labels on the terminal blocks (Grid - L, N)(GEN - L,N) (Load - L, N), insert the AC cable directly into the corresponding terminal block through the circular opening.

The CT installation direction can be set on the screen.


3.3 PV Module connection

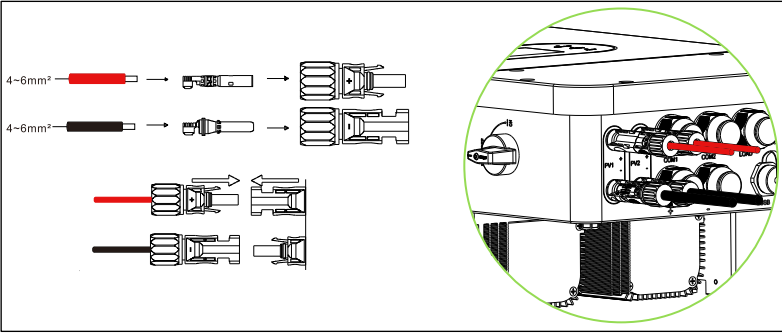

- Strip 0.39 inches(10 mm) of PV cable insulation.
- Insert the PV cable into the open crimping pliers.
- Insert the tubular terminal and press the crimping pliers.
- According to the identification (PV1+,PV1-) (PV2+,PV2-) on the box body, the PV cable is inserted into the corresponding terminal.

Note: It is strictly forbidden to connect the positive and negative poles of the PV input terminals reversely.

3.4 Meter or CT Connection

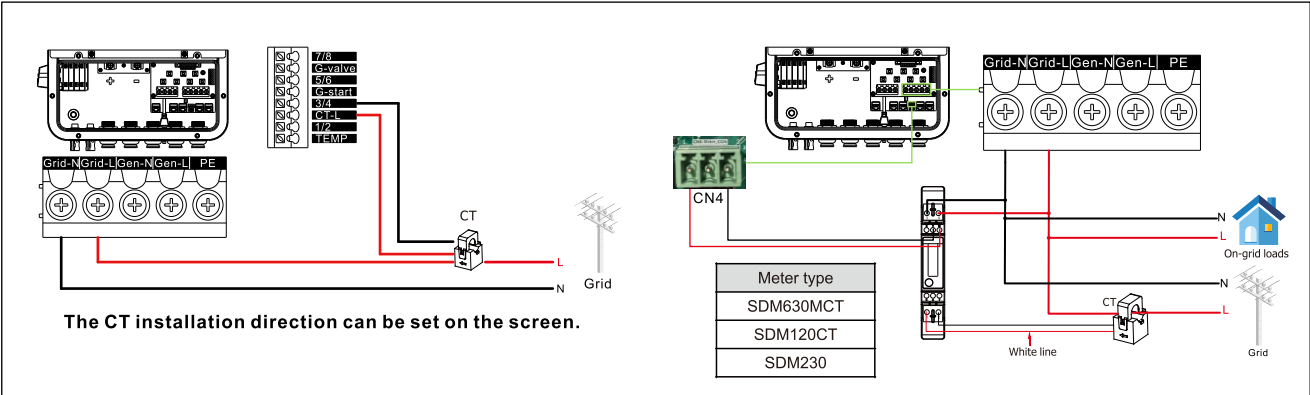

The CT installation direction can be set on the screen.

Meter type
SDM630MCT
SDM120CT
SDM230


**CT connection note:**

Connect the white line of CT to the functional port No. 3, and the black line to the functional port No. 4. Before installing the CT to the live wire, please make sure that the CT is connected to the inverter port correctly. Connect CT to Grid L and make sure that the arrow points from CT to load.

The default CT direction is the arrow on the CT pointing from the grid to the machine.

The CT direction is settable.


3.5 Grounding

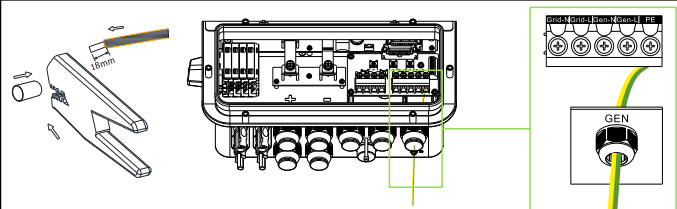

The grounding cable should be connected to the terminal row shown on the left to prevent electric shock.

- Strip 0.7 inches (18mm) of insulation from the grounding cable.
- Insert the ground cable into the opening crimping clamp.
- Insert the tubular terminal and crimp the tool.

Insert the grounding cable directly through the circular opening into the corresponding terminal row according to the marking (PE) on the terminal row.

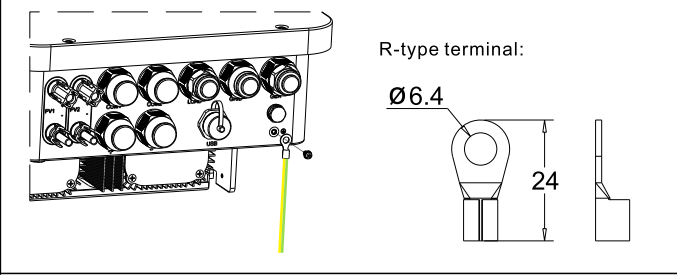


Ground cable shall be connected to ground plate on grid side this prevents electric shock, if the original protective conductor fails.

Model	Wire Size
SPM 3000-6000TL-HU	12 AWG

Make sure the inverter metal housing is grounded.

3.6 Collector Connection

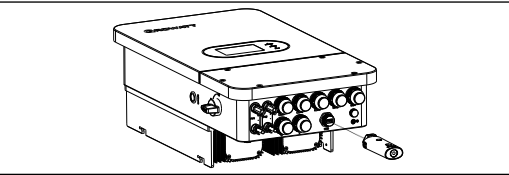

- Take out the external collector from the inverter accesson bag.
- Install the external collector to the position marked in the picture on the left.

4.Checking before power on

No	Check Item	Acceptance Criteria	No	Check Item	Acceptance Criteria
1	Inverter installation	The inverter is installed correctly, securely and reliably.	6	Cable connections	The battery cable, AC cable,PV cable, Ground cable, and other signal cable are connected correctly, securely, and reliably.
2	Cable layout	Cables are routed properly as required by the customer.	7	Unused terminals and ports	Unused terminals and ports are fitted with waterproofing bolts or watertight caps or drill guide unopened.
3	Cable tie	Cable ties are secured evenly, with no sharp protrusions.	8	Cable routing pipe sealing	All cable routing pipes at the bottom of the enclosure are sealed.
4	Grounding	The ground cable is connected correctly securely,and reliably.	9	The cleanliness of the wiring box	Please make sure the wiring box is clean and tidy
5	Switches	Switches connecting to the SPM 3000- 6000TL-HU are in the OFF position.	10	Installation environment	An appropriate installation space has been chosen, and the installation environment is clean and tidy.

5.Power on/off the inverter

Before power on, please make sure all of the voltage and current are in thspecification of the inverter. Otherwise it will be damage to the invert

The steps of turn on the inverter as follow:

- Turn on the breaker between battery and the inverter.
- Turn on the power on/off button
- Turn on the PV switch.
- Turn on the backfeed breaker between Grid and the inverter
- If need to setup the inverter,please refer to chapter 7 of inverters usermanual for details.
- The shutdown steps are opposite to the above order.

6.Status of the inverter

Inverter comes with three LED indicators. From the front cover top to bottom, it shows the indicator of AC/INV Charge and Fault.

LED Indicator		Messages	
AC/INV	GREEN	Light	Powered by AC
		Flicker	Powered by DC
CHARGE	GREEN	Light	Full battery
		Flicker	Charging
FAULT	RED	Light	Error
		Flicker	Warning

7.Service and contact

Shenzhen Growatt New Energy CO.,LTD
4-13/F, Building A, Sino-German(Europe) Industrial Park, Hangcheng Ave, Bao'an District, Shenzhen, China
T +86 0755 2747 1942
E service@ginverter.com
W www.ginverter.com



Download
Manual



Download
ShineWilan-X2



Growatt New Energy

GR-QG-195-A-00